

www.luxorworkspaces.com

# RCLMHEX PET Wall Panels Installation Instructions


Tools Required: None


### **IMPORTANT:** For best results:

- Allow recommended time for adhesive strips to attach to PET panels before affixing them to a wall (spring, summer, autumn = 12-24 hours, winter = 48-72 hours).
- Ensure wall is clean, dry, flat, and dust-free before attaching panels.
- Indoor use only at temperatures between 50°F and 100°F (10°C and 38°C).
- Do not use outdoors or in damp or high humidity locations.
- Do not use on wallpaper, damaged walls, or damaged glass.


## Parts Key

800-323-4656

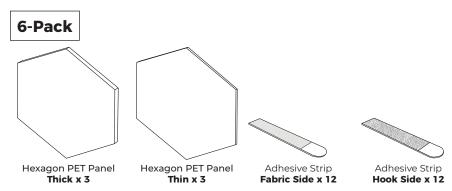


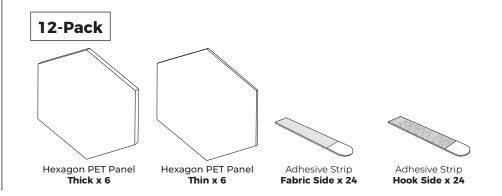




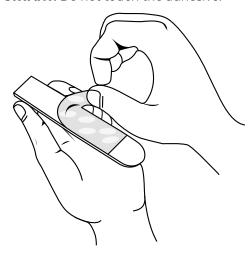

Stick both fabric strips to one side of a PET panel as shown.

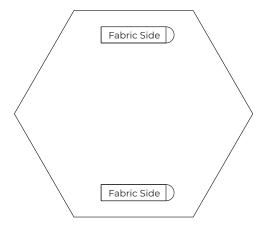

**NOTE:** Both sides of each panel are identical, so it does not matter which side the adhesive strips are attached to.

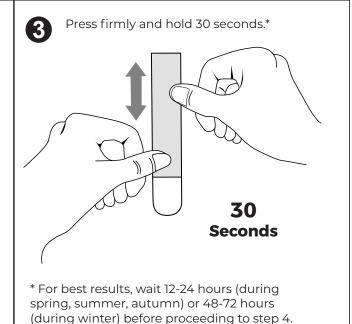






# **RCLMHEX PET Wall Panels** Installation Instructions

www.luxorworkspaces.com 800-323-4656

Tools Required: None

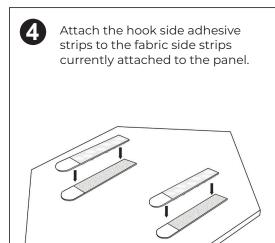

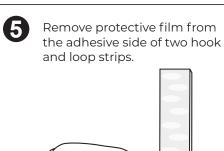

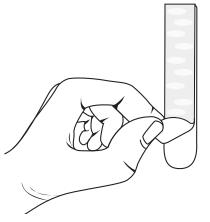


**IMPORTANT:** Do not touch the adhesive.






\*For best results, ensure wall is clean dry, flat, and dust-free before affixing panels.

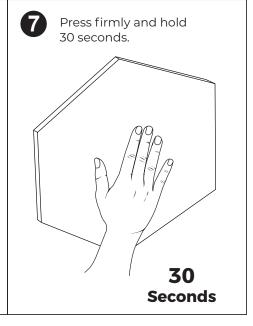

# **Pattern Ideas**

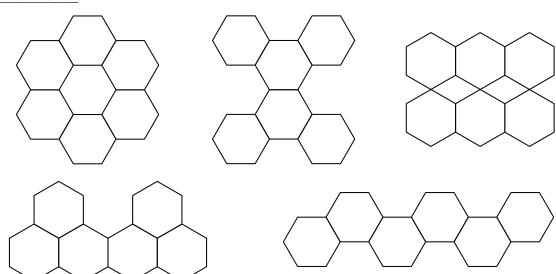

# **Removing Adhesive Strips from a Wall**

- 1. Firmly hold the strip with one hand.
- 2. Grab the tab with your other hand.
- 3. SLOWLY pull the tab parallel with the wall, away from the strip.
- 4. Keep the tab as close to the wall as possible (NEVER pull away from the wall).
- 5. The adhesive layer will slide out from behind the strip, detaching the strip from the wall.

**NOTE:** Adhesive strips are not reusable.